

## Hanging Chair to Frame

Please note that the S-hook is permanently attached to the V-bar (E).

- 1 Hook the chain (H) over the S-hook welded to V-bar (E). When assembled properly, the hook part of the chain will be hanging down.

The purpose of the chain is to allow adjustment according to your size. If you wish to sit up higher, simply take up the chain until you experience the maximum comfort. Additionally, the ropes of the chair will stretch slightly through use. The chain will allow you to compensate for this.


- 2 Hang your chair over the hook on the chain. (See photo at right.)
- 3 If after sitting in the chair for the first time you feel that it needs adjustment, simply adjust the chain accordingly. We recommend that your feet touch the ground when sitting completely back in the chair with knees slightly bent.

**WARNING:** This product was designed for your leisure and comfort. It was not intended to be used as a swingset or to be abused by swinging severely back and forth. Any drastic force could cause the frame to tip and cause injury. Occasionally check the fit of all the parts, especially after moving the frame. All tubing pieces should fit totally over the swagged, tapered pieces.

**ADULT SUPERVISION RECOMMENDED  
DURING CHILD USE**

*The Swing Chair is ready for use.  
Relax and enjoy it!*

For a longer life of your swing, take the swing chair inside when not in use for extended periods of time.

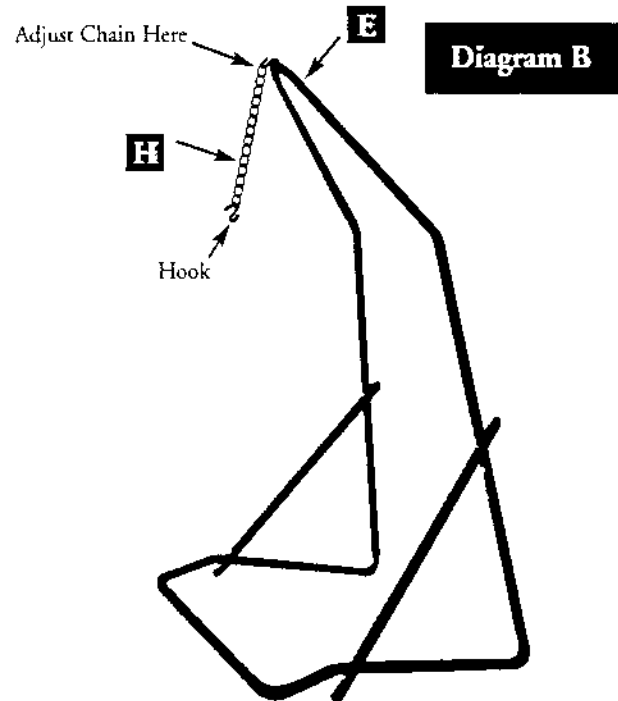

This Carton contains the following parts:

Part Number	Item	Quantity
A	U-Shaped Front Base Rail	1
B	L-Shaped Base Rails	2
C	Straight Uprights	2
D	Bent Top Uprights	2
E	V-Shaped Header Bar	1
F	1" Round Diameter Braces	2
1 Bag of Hardware consisting of the following:		
H	Chain with Hook	1
I	3/8" x 2-1/4" Hex Head Bolts	4
J	3/8" Lock Nuts	4